

WOLFBOX

Dare to Everywhere

i17

3-CHANNEL DASH CAM

User Manual

wolfbox.com

The information in this manual is subject to change without notice.

Content

Precautions	2
Warnings	2
Product Overview	3
Warranty	3
Product Specifications	4
Package Contents	5
Appearance	6
User Interface Overview	7
Function Overview	10
Play on APP (About Wi-Fi and APP)	13
How to Play Video on Computer	14
Parking Monitor(Optional)	16
Installation	17
Trouble Shooting	20
Customer Service Center	22

Precautions

1. For further inquiries, please contact our customer service via email at service@wolfbox.com.
2. Please use original accessories to avoid compatibility issues and insufficient current supply from non-compatible accessories. For example, 2-in-1 or 3-in-1 cigar sockets will not provide enough current to the device.
3. Please do not tamper or splice the rear camera wire for the purpose of extension, as the rear image/feed to the display may be lost. The length of the included cable for the rear camera is 20 feet, and is suitable for most types of cars.
4. If you wish to use a micro SD card with a capacity > 32GB, Please change the micro SD card [Class10 (10MB/s) required] format to FAT 32 on PC.

Warnings

- Keep small accessories out of the reach of children. If this product is damaged or malfunctions, stop using it immediately and contact WOLFBOX support. Continued use may cause fire, electric shock or vehicle failure.
- This product is intended to be used as reference material in the event of an accident. We do not guarantee its effectiveness or admission as complete evidence.
- Please note that this product may infringe on privacy and other rights depending on how it is used. We are not responsible for any cases where this product infringes on privacy or other rights.
- This product is for DC12V/24V vehicles only.
- The specifications and appearance of this product are subject to change without notice for improvement.

Product Overview

- Thank you for choosing WOLFBOX i17 Dash Cam. This product provides a high-quality image and captures irrefutable evidence in the event of an accident, and records the beauty along the way for you.
- WOLFBOX is a professional automotive supplies manufacturing company. We have worked in the field of dash cams for more than ten years. We have a team of experienced and imaginative engineers who are committed to building a reliable and trustworthy automotive supplies brand.

Warranty

- We are committed to giving customers the best product experience and after-sale service.
- Our warranty period is 12 months. If the machine parts are damaged or there are any problems during use, we will solve them in time and provide you with a satisfactory shopping experience.

Note: The specific warranty period is subject to local laws.


- Please contact us with your online order, and we will provide free replacement and lifetime technical support.
- **Free extended warranty service:** After registering information on WOLFBOX.com, you may extend the warranty for an additional 6 months free of charge.

URL: <https://wolfbox.com/pages/warranty-form>


Product Specifications

RAM	DDR3 8GB	Display Type	IPS
Video Format	MP4	Image Format	JPG
Front Camera	4K	Inside Camera	1080P
Rear Camera	1080P	Rear Lens FPS	25FPS
Display Size	3"	Power Interface	USB-C
GPS	Integrado	Wi-Fi Connection	Compatible
Operating Temperature	-4°F~158°F		


Package Contents

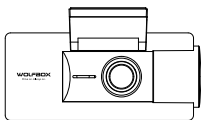


• i17 4K Dash Cam

 

• 2.5K Rear Camera

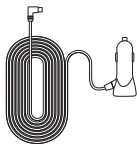


• Power Supply Cable
with Car Charger

 

• Rubber Straps*4



 • Adhesive



• Electrostatic
Sticker *2



• Cable Clips*5




• Tool




• User Manual

Appearance

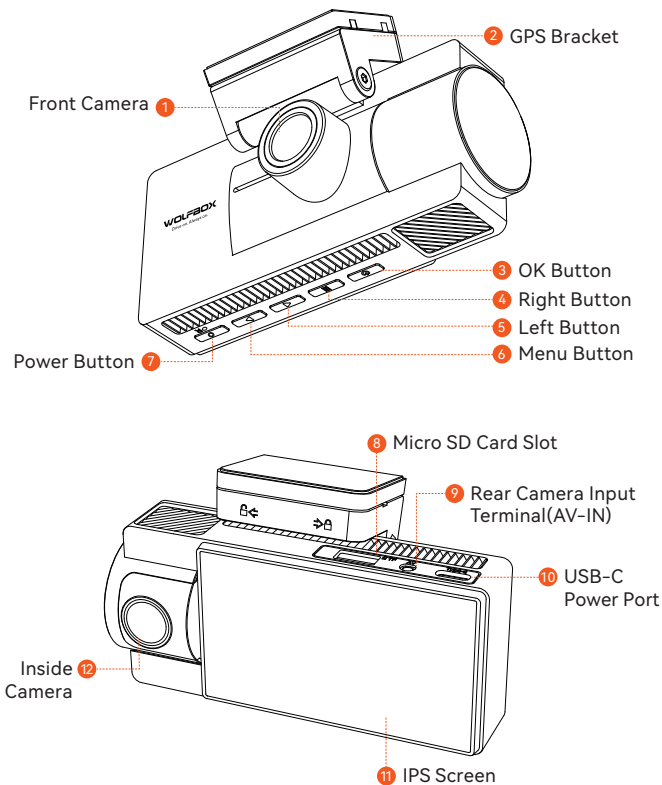

User Interface Overview

- Recording Mode

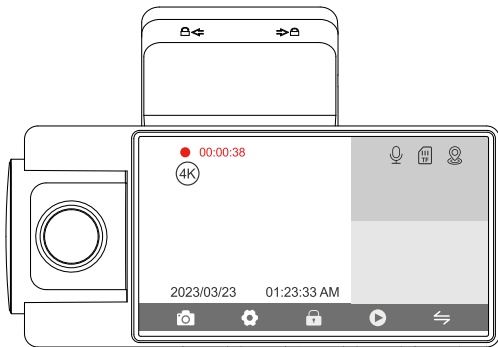


Icon	Description
● 00:00:38	Recording status and recording time
● 00:00:38	Emergency recording is on
	Voice recording status
	TF card is inserted
	GPS status

Icon	Description
2023/03/23 01:23:33 AM	Date and time of the camera
	Resolution
	Photograph
	Voice recording statusd
	Emergency recording. Short press to lock the video
	Videos
	Switching from front, inside and rear cameras

• Playback Mode

- 1 Press right button to enter Playback mode.
- 2 Press left or right button to select the folder you want to play.
- 3 Press OK button to watch the recorded video.
- 4 Press the button to delete the current video /all videos.

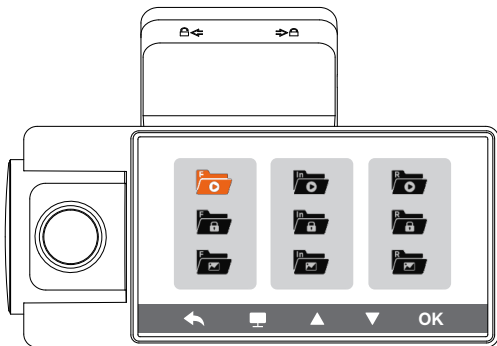

Function Overview

Short press **M** button to enter settings menu, where you can adjust various functions.

Function	Option	Description
 Resolution	Front4K+Inside1080P +Rear1080P Front2.5K+Inside1080P +Rear1080P	Video resolution selection.
 Loop Recording	1 Minute /3 Minutes /5 Minutes	Set the duration for loop recording of video files.
 Time Setting	/	Adjust the current time displayed on the device.
 Time Style	12 Hours/24 Hours	Set the time display system.
 Time Zone	/	Adjust the time zone based on geographical location.
 Language	English/Français/ Deutsch/Italiano/ Español/...	Set the language for the device.

Function	Option	Description
 GPS Info	/	Display recorded GPS data.
 Screen Saver	OFF /10 Seconds /30 Seconds /2 Minutes	Set the activation time for the screen saver.
 System Setting	/	Find more personalized setting.
 Flicker	50 Hz/60 Hz	Set the screen refresh rate.
 G-Sensor	Off/Low/Medium/High	Set the sensitivity of the G-sensor.
 Speed Units	KMH/MPH	Set the switch for daylight saving time.
 Fatigue Reminder	A Reminder Will be Made During 1h/2h/3h/OFF	Set the time for fatigue reminder.

Function	Option	Description
 WiFi	ON/OFF	Set the status of the device's WIFI connection.
 Format	Format SD card. All data will be deleted	Format the SD card and delete videos and photos stored on it.
 SD Speed	/	SD Speed Detection
 Reset Factory	/	Restore all settings to factory defaults.
 Version	/	Software Version
 Help Center	/	After-sales contact information

Note:

For a smooth user experience, we recommend formatting the SD card once a month.

Play on APP (About Wi-Fi and APP)

The Wi-Fi feature has been designed so you can pair your dash camera wirelessly with your smartphone and access your recordings instantly from the dash cam. Here you can view, download and share your videos easily with your friends and family.

The app “WOLFBOX” is a free app that allows you to operate this WLAN built-in drive recorder from your smartphone.

• How to connect Wi-Fi?

1. Download the “WOLFBOX” app

Go to the following address to download the “WOLFBOX” app: <https://wolfbox.com/app/> You may also use your smartphone to scan the QR Code from your dash cam or on the right side.



2. Enable Wi-Fi

Go to Settings to turn on Wi-Fi. Go to Settings to turn on the Wi-Fi. Then, the device screen will display the Wi-Fi name and password.


3. Connect Wi-Fi

To connect your iPhone or Android phone to the i17's Wi-Fi network, go to Settings > Wi-Fi and select i17 Wi-Fi. Then, enter the default **password: 12345678**.

4. Open the “WOLFBOX” app

Once your mobile phone is connected to the i17's Wi-Fi network, open the WOLFBOX app. The camera will sync automatically, and you should see the live video feed on your phone.

- **Edit and share Your Videos in the App**

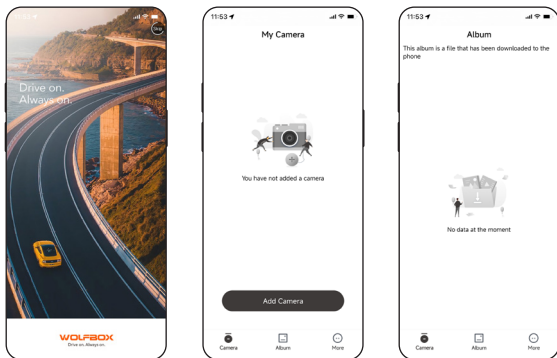


In the app, you can view and edit downloaded local albums and share them with others.

How to Play Video on Computer

We recommend the application “GPS Media Player” to watch and play dash cam videos, and view Google Maps.

You can download it for free on Mac or Windows from the following link: <https://wolfbox.com/gps-player/>

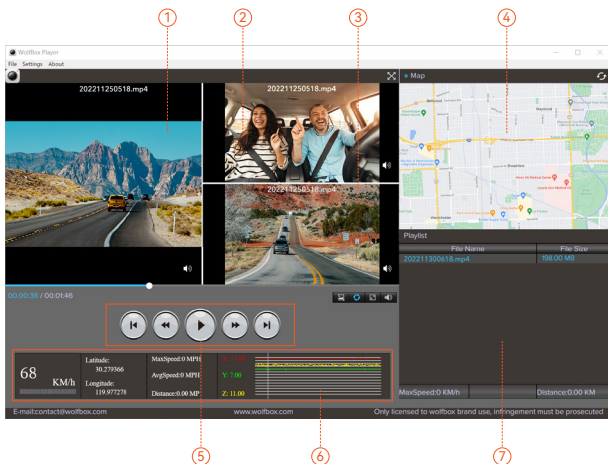


- ① Video play window (Front)
- ② Video play window (Inside)
- ③ Video play window (Rear)
- ④ Map and track display
- ⑤ Play control panel
- ⑥ Speed and driving state indication
- ⑦ Playlist

Note:

If the video files of Front, Middle, and Rear road tracks are recorded synchronously and loaded into the playing list at the same time, they can be played separately in split left and right screens.

When you find the desired video file, hold down the left mouse button and drag the desired files to the video play window to play it.

Parking Monitor(Optional)

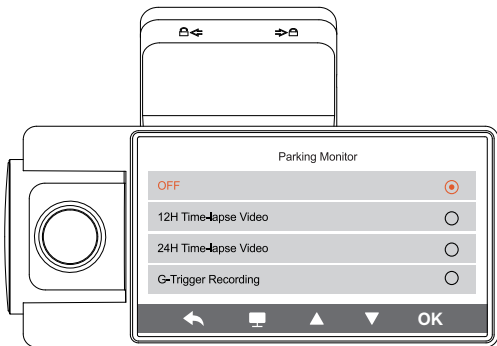

Available when the hardwire kit is connected.

* not included in the package.

- **Mode 1:**

Time-Lapse Video: 12H/24H

Dash cam will record the video in the parking state at a frame rate of 1fps in the next 12/24 hours.


- **Mode 2:**

G Sensor Trigger Recording

The camera will turn off while parking but automatically turn on and start recording when there's collision or vibration detected and the video file will be locked.


Installation


Before installing your dash cam, please test its functionality with all accessories and change the default settings to your preference.

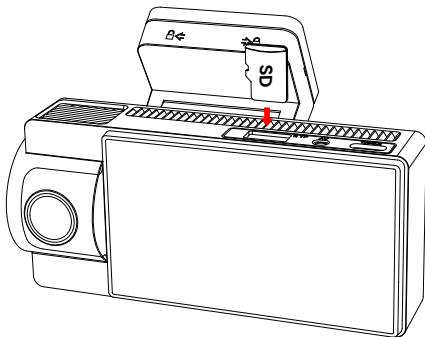

• Front camera installation


Peel off the electrostatic sticker on the cellophane and transfer it to where you want to stick it. Attach the front camera to the electrostatic sticker and press to make it firmer.

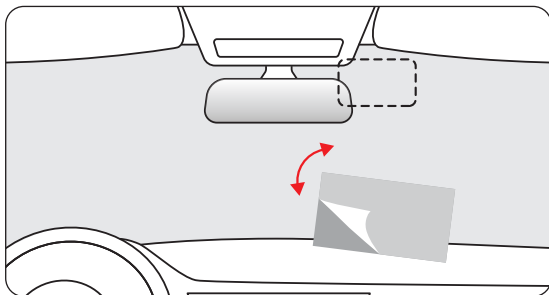

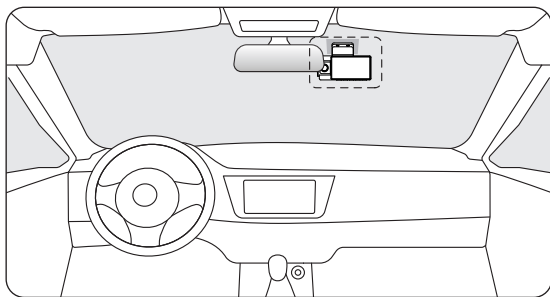


• Wire Layout In The Vehicle

1. The car charger is connected to the cigar socket.
2. Connect the other end of the car charger to the dash cam.
3. Use the crowbar to run the power cable along the front windshield and the roof, and hide the cable down the A-pillar, so as not to block the driver's sight and cause danger.

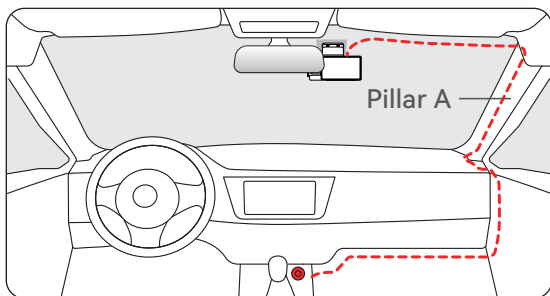

• Mount The Rear Camera

1. Use a clean cloth to wipe the rear windshield where the rear camera needs to be installed.
2. Peel off the electrostatic sticker, transfer it to the place you want to stick it.
3. Drain the air bubbles on the electrostatic sticker.
4. Peel off the adhesive on the rear camera and stick it on the electrostatic sticker.

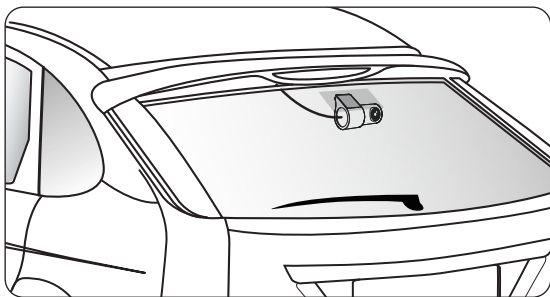

• Power ON/OFF

- Short press the power button to turn on, long press the power button to turn off.
- When using the car charger, if the cigarette lighter port is ACC, the dash cam will automatically turn on when the car is started.

Trouble Shooting

- **Why is there no GPS signal?**

1. Clean and reconnect the probe on the main unit and bracket. Check for any interference in your car, like metal film on the windshield, radio antenna, or radar detector.

2. Move your car to an open area.

3. If the GPS icon is  , it means the GPS signal is good.

If the GPS icon is  , it means there is no GPS signal.

- **How to turn off the on/off music of dash cam?**

Please go to Settings > Key Sound > Off.

When the click tone is turned off, the power on and off music will also be turned off.

- **Why does my dash cam prompt card error or please format Memory Card every once in a while?**

Please follow the steps below to check:

1. Please go to Settings > Format Reminder to check whether the regular format reminder is enabled.

2. Format the Memory Card.

3. Restore factory settings and restart the dash cam.

4. Update the firmware.

- **Dash cam repeated restart/no boot?**

1. Make sure you are using the original car charger.

2. Unplug the Memory Card and car charger in turn, and reinstall them. Check whether the short circuit is caused by accessories.

3. Reset the machine through the small hole at the bottom of the driving recorder.
4. If none of the above can solve the problem, please try to power on the USB cable to confirm whether the host can be used normally.
5. Please go to the official website to update the firmware.
6. If it is not resolved, please contact your dedicated customer service for a replacement.

- **Why can't I connect to Wi-Fi?**

1. Check the working distance of Wi-Fi, about 15ft.
2. Check the SSID and password of the Wi-Fi, or whether there are other devices connected to the Wi-Fi..
3. Turn off mobile data, security software, and VPN on your phone.
4. If the issue persists, please contact customer support for assistance.

- **Why is the time setting incorrect?**

The dash cam features built-in GPS. It automatically adjusts time based on your location and time zone, eliminating the need for manual time changes. And you can adjust the time through Settings > Time Zone/DST.

Customer Service Center

If you have any problems with the function or installation, please contact us with any questions.



Help Center



WhatsApp



For more information:

✉ service@wolfbox.com

🌐 www.wolfbox.com

💬 <https://wolfbox.com/contact-us>

WOLFBOX

Dare to Everywhere

Check us out here!
Product and service are the foundation of WOLFBOX.

Email: service@wolfbox.com

Phone: +1 888 296 8399



www.wolfbox.com